

QUICK START GUIDE


How to make a 3-point Calibration with your IRwin Methane Leak Detector - Universal Mode (For a factory set unit)

1


Press  followed by 

2

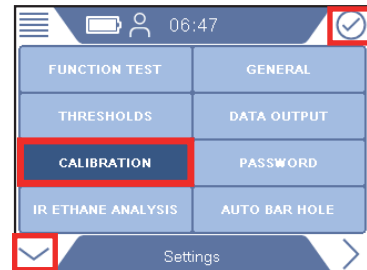


Use  to navigate to *Calibration* and press 




3


If prompted, press  and enter the Intermediate password code. If not prompted, go ahead to next step


4

Press  to get to the drop-down menu. Use  to navigate to *Universal (low range) (10.0ppm 100ppm 2.2% CH₄)*. Press 

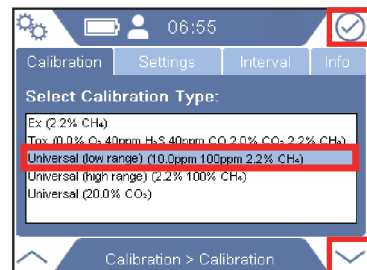


5

Expose the instrument to air and press 

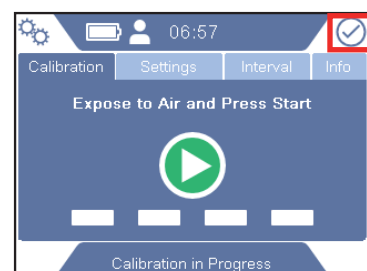

6

Expose the instrument to gas, 10.0ppm CH₄, and press

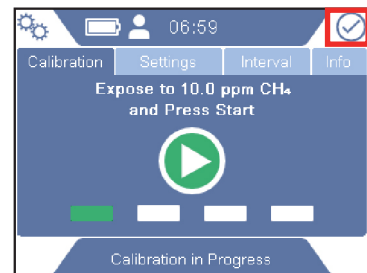


7

Expose the instrument to gas, 100ppm CH₄, and press



8

Expose the instrument to gas, 2.2% CH₄, and press

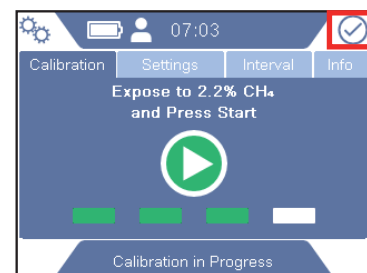

9

When the calibration is done, press followed by
Then press followed by